




1. Turn Camera On.
2. Press Playback Mode Button
3. Press Home Button.

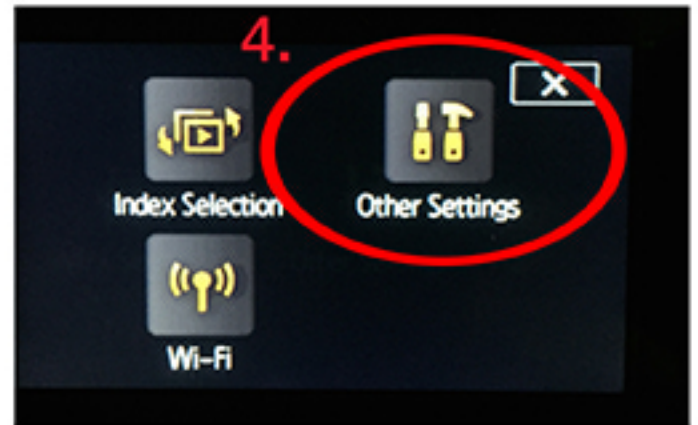


4. On the Touchscreen, Press the Other Settings Button.



5. Hit the Wrench Icon.
6. Scroll to the Initialize Setting and Press the Button.



7. Hit the Memory Card Button

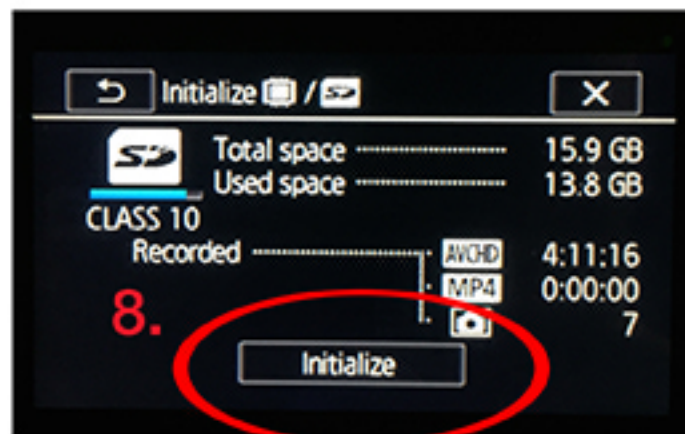

8. When Illuminated, Press Initialize Button.